

Paslode 2nd Fix Cordless Nail Gun



This equipment can be hazardous if misused. It should be used carefully and only by trained operators.

The fuel in the cells is highly flammable: any source of ignition including a lighted cigarette, could be hazardous. Take great care not to cause a fire or explosion.

Keep non-essential people, especially children away from the work area. Never allow a child to touch the equipment.

Do not insert a fuel cell, battery, or fasteners until required, and remove them when the equipment is not in use.

Always keep the nail gun pointing away from you and others. Keep your fingers away from the trigger.

Do not allow the work-contact element to be accidentally depressed against your body or any other object.

Keep the equipment safely in its protective case when it is not in use.

Do not indulge in irresponsible behaviour, while using, or working near the cordless nail gun.

This cordless nail gun must not be used by minors, or by anyone under the influence of drugs or alcohol.

This equipment is designed for operation by an able-bodied adult. Anyone with either temporary or permanent disability must seek expert advice before using it.

You should wear the following items of personal protective equipment: earmuffs or plugs giving protection for levels up to 98 dBA; impact resistant goggles or face shield and strong work gloves.

You may also need a residual current device (rcd) if charging batteries from 230-volt mains.

Work Area

1. Do not use this equipment where there is a fire risk from combustible materials, or flammable liquids and gases.
2. If you plan to use the tool for long periods, or in confined spaces make sure that you have adequate ventilation to disperse the exhaust fumes.
3. Make sure that your work area is clear and safe and that no-one is near to you or could distract you. Only essential people should work in the area when the cordless nail guns being used.
4. This tool should only be used for wood-to-wood nailing.
5. Only use nails recommended by Hire Here in this tool.
6. Protect other people from the noise and danger. Warn others to keep away. If possible, put barriers around your work area.
7. Do not use the cordless nail gun in the rain or where there is excessive moisture.

PPE

- You should only operate this cordless nail gun if you have adequate knowledge and understanding of the equipment and the job to enable you to use it without risk to yourself or others.
- These PPE are the minimum that should be worn whenever you use the cordless nail gun. Some jobs or environments may require a higher level of protection.
- This cordless nail gun will cause noise levels up to 98 dBA - wear appropriate earmuffs or plugs giving hearing protection for this level as a minimum.
- Impact resistant goggles, or face shield when working with this equipment.
- Strong gloves will help protect your hands.
- Anybody who is working near to you will also need to wear appropriate personal protective equipment.

Safety

1. Check your cordless nail gun, fuel cells, batteries, and fasteners. Do not use anything found damaged - contact us if anything is damaged.
2. Fuel cells must be stored in a secure fireproof box, away from any source of heat.
3. If fuel escapes from a punctured cell, it will rapidly evaporate into a large area of explosive gas. Any source of ignition including a lighted cigarette, or the firing of this cordless nail gun could cause an explosion.
4. Do not load a fuel cell, battery, or fasteners into the cordless nail gun until it is required for immediate use. It should remain unloaded, in its storage box, when not in use. Do not point the cordless nail gun at anyone, even when it is not loaded.
5. You must always unload the fuel cell and battery from the cordless nail gun before adjusting it, or clearing a jammed nail, and when you have finished work.
6. The fuel cell is non-refillable.
7. Dispose of empty cells responsibly or return them to Hire Here. Do not throw empty cells onto a fire.
8. Before you start work, make sure you understand how to use the cordless nail gun safely with no danger to yourself or others.

Depth Adjustment

- The work-contact element is the part of the tool that is pushed against the work piece. Its position can be adjusted to for different depths of penetration, and for fasteners of different lengths.
- The battery must be removed before any adjustment is made.
- Turn the adjustment wheel near the nose of the machine to adjust the depth of penetration.
- Reload the battery when you are ready to start using the equipment.

Fuel Cells

1. Use only fuel cells and metering valves that have been supplied or specified by Hire Here.
2. You need to fit the metering valve to the fuel cell before you can load the cell.
3. First, push the valve and cap onto the fuel cell until a hiss of gas is released. Then remove the valve and cap from the cell and take the cap off the valve by pulling it back.
4. Put the valve back in position on the fuel cell with the front pointing away from you. Push the front of the valve forwards and down, and then push the back down onto the cell until it clicks twice. It is now ready to load.
5. The fuel cell compartment is located at the back of the nail gun. Open it by pressing the cover inwards then swinging it down towards the back of the handle.
6. Load the fuel cell in so that the metering valve goes in last. Locate the stem of the valve into the Yellow aperture in the adapter.
7. Shut the compartment, making sure the fuel cell does not move.

Battery

- The battery will slowly discharge while inserted even if the tool is not being used. Remove the battery if the tool is not being used.
- Use only the correct batteries for your equipment as supplied or recommended by Hire Here.
- The battery compartment is located on the right side of the magazine. Hold the equipment upside down to insert or remove the battery.
- The light emitting diode in the handle will display either red or green to indicate the condition of the battery.
- When the work-contact element is not depressed, a flashing green light shows that the battery is in tool. If the light flashes red, the battery is flat: you should recharge the battery.
- When the work-contact element is depressed, a continuous green light shows that battery is charged ready for use.
- A continuous red light shows that the battery is flat and needs recharging.
- The battery must be removed for recharging.
- Recharge the battery only with the charger supplied, following the instructions given by Hire Here. If you have an rcd, plug it into the 230- volt 10. socket. Plug the charger into the rcd.
- Toxic and flammable fumes are produced when charging some types of batteries. Charging should be carried out in a dry, cool, well-ventilated, and safe location.

Loading Nails

1. Use only nails or other fasteners that have been supplied or specified by Hire Here. If you need different nails, contact us.
2. Do not operate the trigger, or have the yoke depressed while loading or unloading.
3. Holding the tool by its handle in your right hand, align the heads of the nails with the silver channel in the rear of the magazine and insert one or two strips.
4. Push the nail strips forward.
5. Squeeze the release level and pull the follower ring to the rear of the magazine until the follower passes the last of the fasteners.
6. Release the follower and let it push the nails forward into the nose of the tool.
7. As the fasteners are used, the strip will be pushed along. The indicator at the side of the magazine will show when the tool requires reloading.
8. When there are approximately 10 fasteners left, a safety mechanism will prevent further operation. Reload a fresh strip of fasteners.

Using the Cordless Nail Gun

1. Wear your protective equipment including goggles and ear defenders.
2. Do not carry a loaded nail gun around: unload the fuel cell and battery first.
3. To fix a nail, press the work-contact element against the workpiece, and pull the trigger.
4. This equipment will drive two to three nails per second, or up to 500 per hour. Do not try to force it to work faster - it will damage the tool.
5. When working close to the edge of your timber take care not to split it.
6. When you have finished work, unload and clean the cordless nail gun and store it and the fuel cells, battery, and fasteners securely.
7. If your equipment is not working properly or appears to be faulty, do not attempt to repair it. Contact Hire Here.