

Steam Cleaner



1. Unscrew the safety cap by pressing down and turning anticlockwise.
2. Fill up the tank with approximately 2 litres of plain water. Never use demineralised water, this may cause damage to the machine.
3. To fasten the safety cap, press own and turn clockwise gently, without over tightening the safety cap, this could damage the o ring inside the cap.
4. Insert the hose into the system socket until you hear a click.
5. To remove pull up the socket lid and press the button, then pull out the plug.
6. Connect the cable to the mains and make sure the voltage is the same as the label beneath the appliance.
7. To switch the machine on, press the main switch, then wait for the water in the boiler to get under pressure (as signalled by the green light coming on). Only then will the machine be ready.
8. Now press the other button (a light in the button goes on) to activate the steam output valve and press the trigger on the grip. Steam will start coming out (the first 10 – 15 seconds of steam output, water squirts out along with the steam due to condensation, this is normal, do not be alarmed).

As soon as you start working the machine, the green light coming on that the heating coils are on and maintaining pressure in the boiler.

When the water level in the boiler gets low, the orange light will turn on to let you know.

1. To refill quickly, press the ON/OFF button to off, and evacuate the remaining steam by pressing the trigger until no more steam comes out.
2. Use caution opening the safety cap and wait at least 5 minutes and then refill with plain tap water
3. You must wait in order to avoid while pouring in fresh water, the hot water remaining in the boiler does not squirt out resulting in injury).
4. Close the safety cap gently after refilling and press the ON/OFF button to start heating up the boiler again.

Continue as above.

To vary the steam output, turn the steam regulator knob on the top of the machine at the back until closed and then progressively open to the desired amount of steam you need.

Keep in mind that the higher the steam output, the more the pressure goes down during constant work, and the higher the pressure in the boiler, the hotter and dryer the steam will be.

Accessories.

The accessories connect to each other by simply pressing in the turning them together until the snap into place. Press the safety lock button and pull to separate the parts.

With the hose connected, add the extension tubes in order to use the floor brush. To clean the floor, attach a cloth to the floor brush by using the clamps or clean with steam and remove the loosened dirt as you prefer. On delicate surfaces, such as parquet or carpet, an out of the way patch should be tested to see if the heat could cause damage.

1. Hose
2. Extension Tubes x 2
3. Floor Tool
4. Squeegee
5. Jet Nozzle
6. Triangle shaped Hand Brush